

Ruizu X26 MP3 Player

 
Quick Reference Guide



Included Items



Ruizu X26 MP3 Player

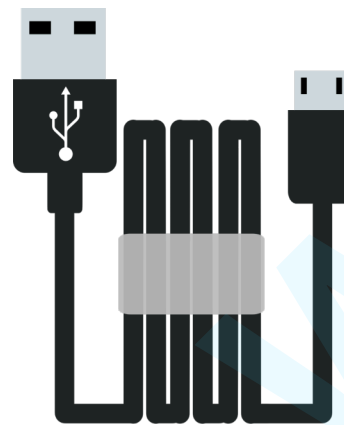


Micro USB cable




Earbuds

Controls / Ports

 
General

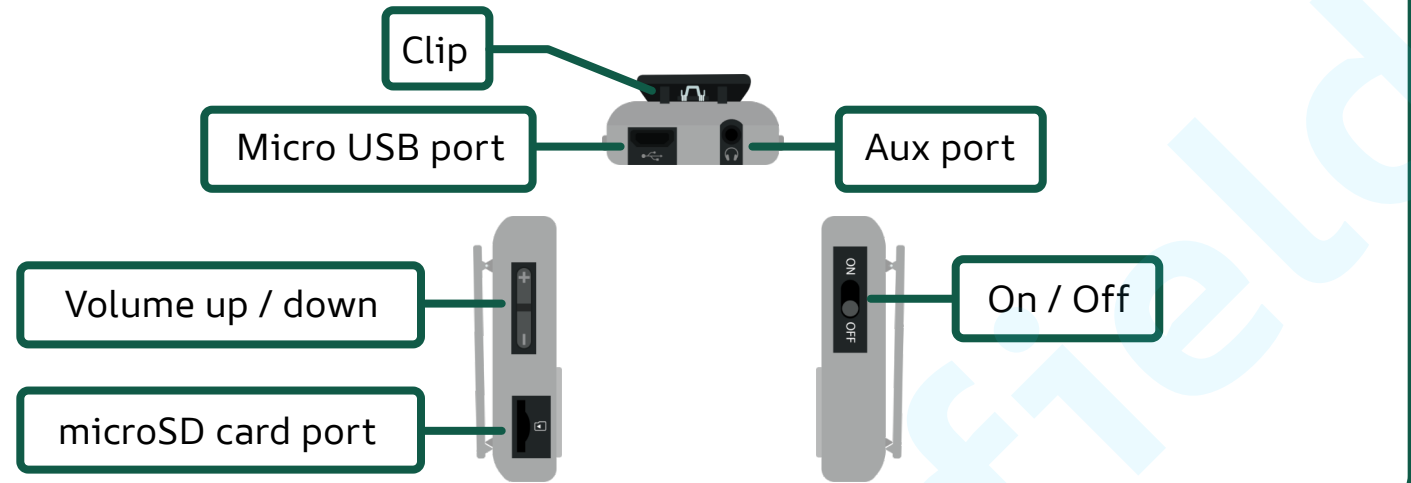


Menu navigation controls

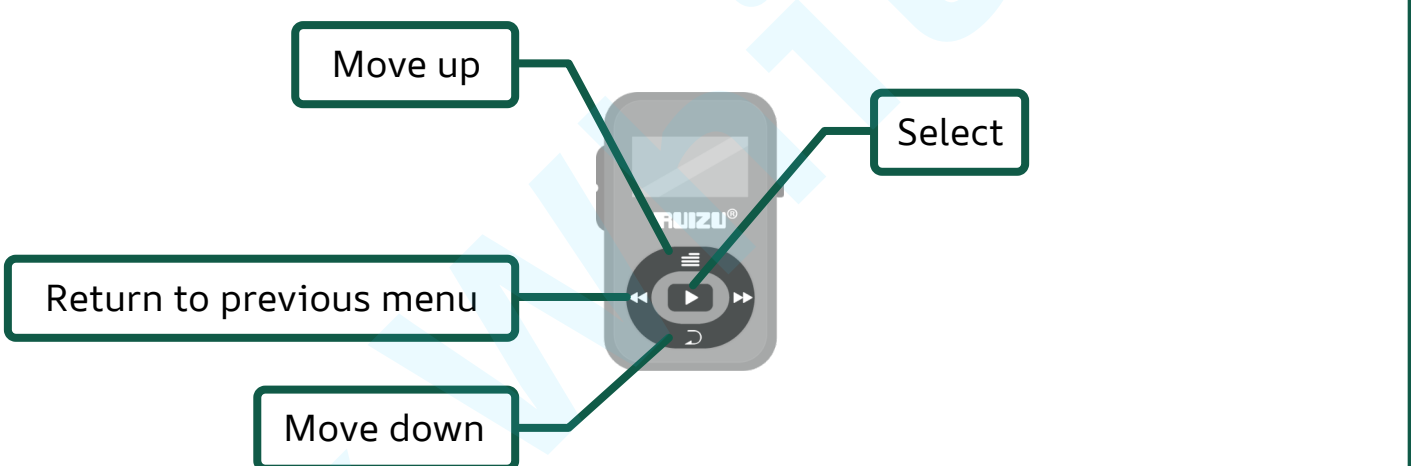 


MP3 player controls

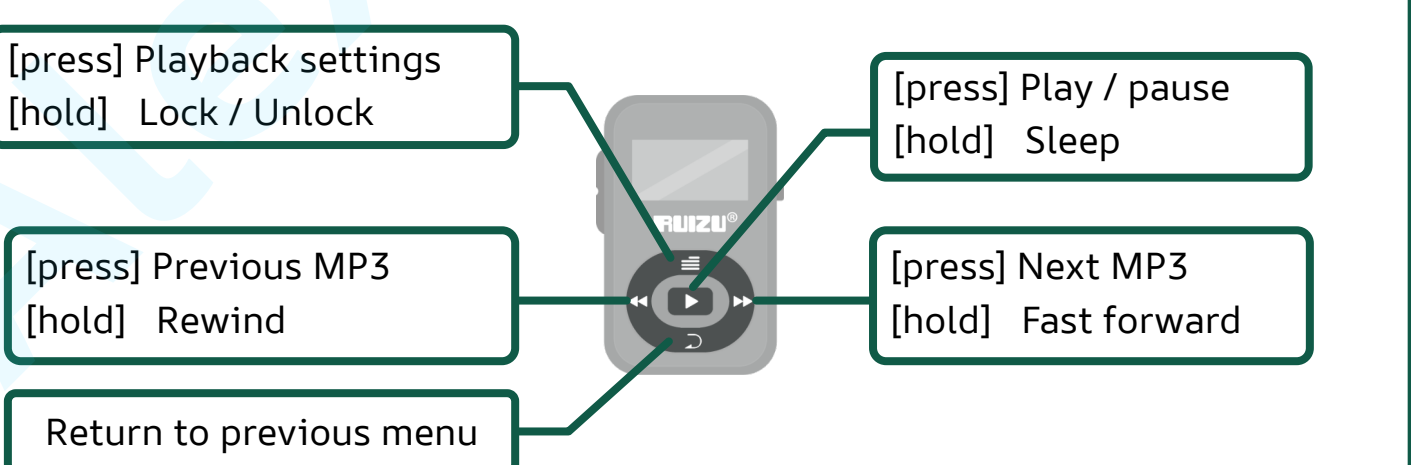 

Power On / Off

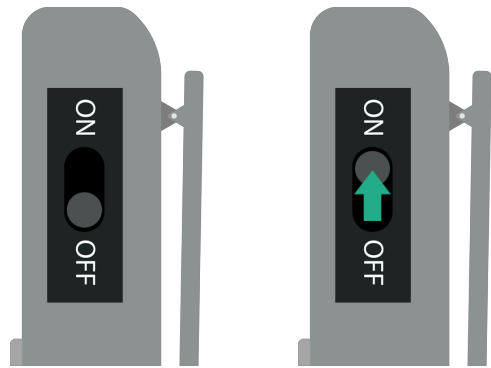 




- To turn on the device, slide the On/Off button to the "On" position.
- To turn off the device, slide the On/Off button to the "Off" position.

 Turning off the device does not save your current position in the MP3.
To save the position, put the device to sleep.



Initial Setup



- When turning on the device for the first time, it presents a list of languages.
- Navigate the options with  and . Press  to select your language.
- Your device is now ready to use.


Sleep / Waking Up




1. To put the device to sleep, press and hold the  button for four seconds. A countdown timer appears after the first second.
 2. Putting the device to sleep saves your current position in the audio file.
 3. To wake up the device, press and hold the  button until the logo appears.
- You can turn off the device after putting it to sleep.
 - If you turned off the device after putting it to sleep, simply turn it back on.

Adding a microSD Card



 
 The device has 8 GB of local storage.
To add more storage, insert a microSD card.

1. To add a microSD card, insert it in the microSD card on the left side of the device, with the gold pins facing the same direction as the device's screen.
2. Push until you feel a click.


 The device does not support microSD larger than 1TB.

Adding Music

Using a micro USB cable

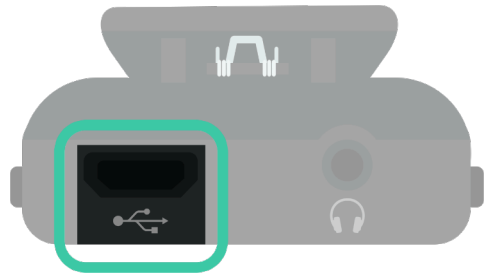

1. Connect the device to your computer with a micro USB cable. The device's name is "X26." (If you added a microSD card, the card has a unique name.)
2. Click and drag the MP3s to the X26's internal storage (or to the microSD card) or delete them to remove them from the X26 internal storage (or microSD card).
3. When finished, disconnect the device from the computer and micro USB cable.
4. Next time you turn on the device, it will show a loading screen with the word "Searching..." and a progress percentage. Once it completes, you can use the device again.

 Adding or removing MP3s directly through the microSD card doesn't cause a loading screen, so you can instantly play the MP3s after adding them.

Using a microSD card reader

1. Turn off the device.
2. Remove the microSD card by pushing it until you feel a click, then pull it out.
3. Connect the microSD card to your computer with a microSD card reader. The microSD card has a unique name.
4. Click and drag MP3s to the microSD card to add them.
5. When finished, remove the microSD card from the microSD card reader.
6. Reinsert the microSD card into the device, and turn the device on.

Menus

Bluetooth



- This menu is for connecting bluetooth devices to the device.

Settings




- This menu is for adjusting various settings of the device. (ex. time, date, backlight brightness)

Folder




- In addition to MP3s, the device also supports folders. This menu is for navigating those folders.

 The device's playlist feature does not work. Use folders to create playlists.

Bluetooth



- In addition to MP3s, the device also supports eBooks. This menu is for reading eBooks.

 The device can only read TXT ebooks.

Menus

Calendar



- This menu is for seeing or editing the date, day of the week, and the time.

FM Radio



 
- This menu is for finding and listening to local FM radio stations.

Record




- This menu is for recording nearby audio using the built-in microphone and saving it as an MP3.

Music

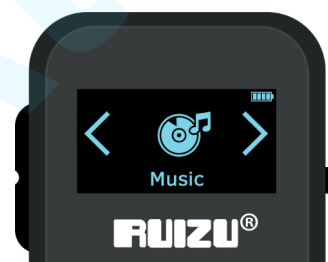

- This menu is for finding music stored on the device or microSD card. This menu organizes the music by album, artist, and genres.


 The device can play MP3, WAV, APE, WMA, and FLAC audio files.

Menus

Now Playing



- This menu returns you to the song the device is currently playing.

 If there is no song currently playing, the menu reads “Last Playing” and takes you to the last song played.

Additional Information

For additional information:

- Read through the instruction manual included with the device.
- <http://www.ruizutek.com/>

For information on warranties and returns:

- <http://www.ruizutek.com/warranty.html>

For customer support:

- Phone: +86 134806631864
- Email: service.ruizu@hotmail.com