 


# **BS-26 Media Player**

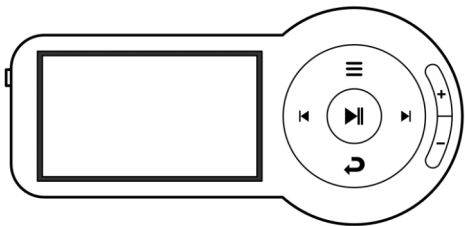

# Table of Contents


Items included.....	1
Device Basics.....	3
Adding Media to the Device.....	5
Controls / Ports.....	8
Menus.....	17
Now Playing.....	19
Playlists .....	21
Audio.....	27
Video.....	30

eBook .....	33
Settings .....	35
Charging the Device .....	39
Technical Specifications.....	42
Contact Us .....	45


# Section 1

## Items included

BS-26 Media  
Player

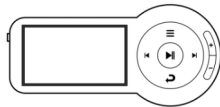


USB A to USB C  
cable

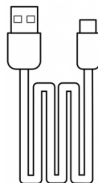

Product Manual



Warranty Card

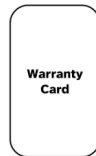

## Section 2

# Device Basics

The BS-26 Media Player can

- play audio files
- play video files
- read eBooks

To add files to your BS-26 Media Player, you need to copy them from your computer to the device.

## Section 3

# Adding Media to the Device

**1)** Connect the device to your computer using the USB cable.



If your computer does not have a USB A port, you will need to use a male-to-male USB C cable.

**2)** Click and drag the files to the respective folder on the device (ex. audio files in the “Audio” folder).

**3)** If it’s a Mac computer, click the eject icon next to the device name on the Mac Finder window before disconnecting the USB cable from the computer.


**4)** Disconnect the USB cable from the computer and the device.

You can now view media on your device.


## **Section 4**

# **Controls / Ports**


**Front**

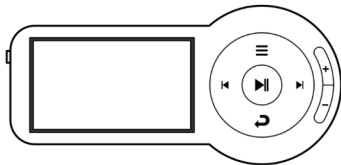

**Top**

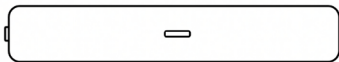 


**Side**

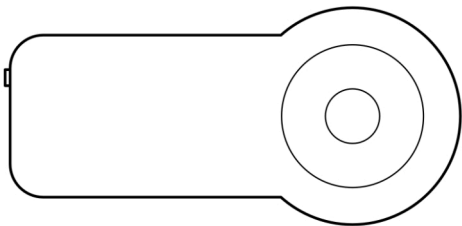


## **Click Wheel**

- Scroll clockwise to:
  - move down in a menu
  - in audio/video playback, fast forward
  - in an eBook, go to the next page
- Scroll counterclockwise to:
  - move up in a menu
  - in audio/video playback, rewind
  - in an eBook, go to the previous page

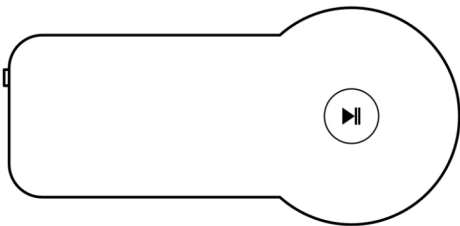


### **Confirm / Play / Pause**

- In menus, confirms whatever menu item you have selected
- In audio/video playback, toggles between play and pause

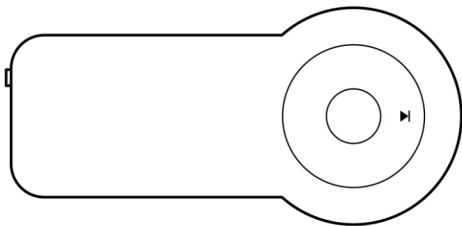


### **Next**

- Plays the next audio/video file
- Opens the next eBook

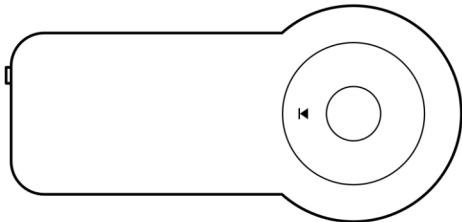

### **Previous**

- Plays the previous audio/video file
- Opens the previous eBook

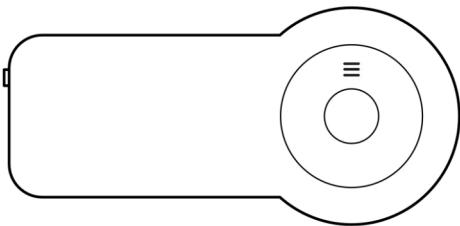


## Playback Menu

- Shows a menu that allows you to adjust the settings when playing an audio/video file or reading an eBook




See the Audio, Video, and eBook sections for specific Playback Menu options.

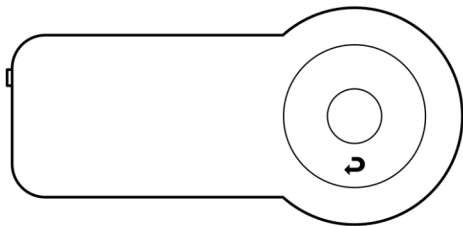


## Return

- Returns you to the previous menu

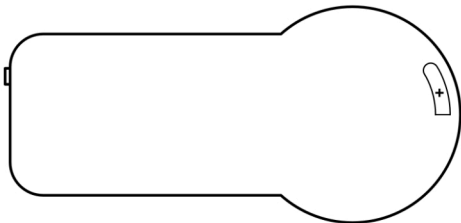


## Volume Increase

- Increases the volume of the audio/video file

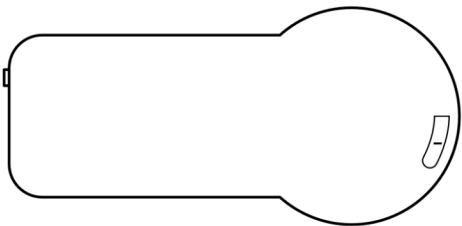


### Volume Decrease

- Decreases the volume of the audio/video file

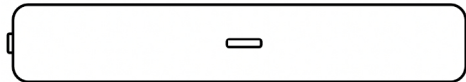


### USB C port

- Allows you to connect a USB cable to transfer files or charge the device

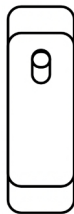

### Power switch

- Turns the device on or off

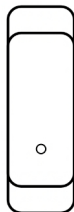


### Aux port

- Allows you to connect an aux cable to output the sound to headphones or a speaker

## Section 5

# Menus

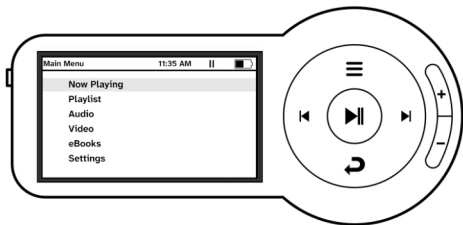

### Menu Header

- The menu header displays:
  - the current menu name
  - the time
  - the Play / Pause status
  - the battery level

### Main Menu

- Now Playing
- Playlists
- Audio
- Video
- eBooks
- Settings

## Section 6

# Now Playing

Selecting this menu item loads the audio/video/eBook you're currently playing/reading.



If you're not currently playing an audio/video file or reading an eBook, the menu item is titled "Last Played" and clicking it loads the last audio/video file or eBook.

## Section 7

# Playlists

### What is a Playlist?

- A playlist is a collection of media in a specific order.

### How to Make a Playlist on the Device:

- 1) While playing an audio/video file, press the Playback Menu button.
- 2) If you select “New Playlist,” it creates a new playlist titled “New Playlist” followed by the next available number and adds the file to it. If you select “Add to Existing Playlist,” you select the playlist you want to add the file to, and the file is added to the end of the playlist.

## How to Make a Playlist on Your Computer

- 1) Create a plain text document.
- 2) Connect the device to your computer using the USB cable.



If your computer does not have a USB A port, you will need to use a male-to-male USB C cable.

- 3) Populate the text document with the directories of the audio or video files on the device by clicking and dragging the files on the device directly onto the document.

- 4) Reorder the audio and video files in the playlist in the order you want.

- 5) Save the plain text file, naming it the name of the playlist and changing the file extension to “.m3u”.

- 6) Click and drag the playlist onto the device in the folder titled “Playlists.”

- 7) If it’s a Mac computer, click the eject icon next to the device name on the Mac Finder window before disconnecting the USB cable from the computer.

- 8) Disconnect the USB cable from the computer and the device.

## How to Edit an Existing Playlist on Your Computer

**1)** Connect the device to your computer using the USB cable.



If your computer does not have a USB A port, you will need to use a male-to-male USB C cable.

**2)** Open the playlist file on your device in the folder titled “Playlists” using a text editing app on your computer.

**3)** Make whatever changes you want to the playlist (ex. changing the order of files in the playlist, renaming the playlist, etc) and save.

**4)** If it’s a Mac computer, click the eject icon next to the device name on the Mac Finder window before disconnecting the USB cable from the computer.

**5)** Disconnect the USB cable from the computer and the device.

## Section 8

# Audio



### Menu

- Artists
  - Lists audio files by artists
- Albums
  - Lists audio files by albums

### Playback Menu

- Add to Existing Playlist
  - Adds the file to the end of a playlist that already exists
- Add to New Playlist
  - Creates a new playlist titled "New Playlist" followed by the next available number and adds the file to the end of the playlist

- Playback Settings
  - Repeat
    - Off
    - One (repeat the same track over and over)
    - Repeat All (repeats the Artist/Album/Playlist when you reach the end)
  - Shuffle
    - Off
    - On (plays the files in Artist/Album/Playlist in a random order)
- Show File Info
  - Shows all of the information for the file

## Section 9

# Video



## Menu

- Alphabetical
  - Lists video files alphabetically


## Playback Menu

- Add to Existing Playlist
  - Adds the file to the end of a playlist that already exists
- Add to New Playlist
  - Creates a new playlist titled “New Playlist” followed by the next available number and adds the file to the end of the playlist

- Playback Settings
  - Repeat
    - Off
    - One (repeat the same track over and over)
    - Repeat All (repeats the Alphabetical/Playlist when you reach the end)
  - Shuffle
    - Off
    - On (plays the files in AlphabeticalPlaylist in a random order)
- Show File Info
  - Shows all of the information for the file

## Section 10

# eBook

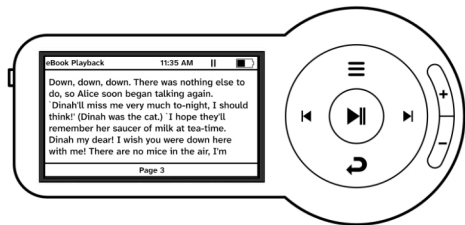

### Menu

- Author
  - Lists eBooks by author

### Playback Menu

- Font Size
  - Allows you to adjust the size of the eBook's font
- Show File Info
  - Shows all of the information for the file

## Section 11

# Settings

### Language

- Controls the language the device displays in

### Backlight Timer

- Controls how many seconds it takes for the backlight to fade after the last input

### Screen Brightness

- Controls how bright the backlight screen is

### Click Wheel Volume

- Controls how loud the sound the Click Wheel makes when used

## Click Wheel Vibration

- Controls the haptic intensity of the Click Wheel when used

## Date and Time

- Controls the date and time on the device and whether or not it's Daylight Savings Time

## Bluetooth

- Controls whether or not a Bluetooth device can connect to this device and output its audio
  - Enable / Disable Bluetooth
  - Connect a New Device
    - Allows you to pick a nearby device to pair
  - Forget Current Device
    - Allows you to forget the connected device

## Factory Reset

- Resets the device to its original settings

## Section 12

# Charging the Device

Connecting the device with the USB cable to a computer or an outlet will charge it.


### Charging with the Device On

The battery icon in the menu header shows a plug icon and the current battery percentage.



## Charging with the Device Off

Once the device begins charging, it will briefly show the a plug icon and the battery percentage over a battery icon. After a few seconds, the screen will turn off. To see the battery percentage again, press any button on the Click Wheel.

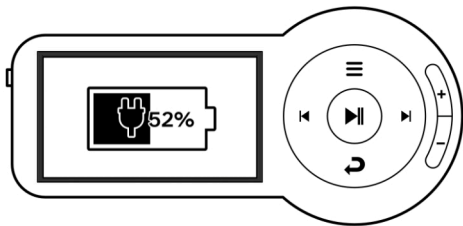

## Section 13

# Technical Specifications

## Bluetooth

- Version 4.2

## Product Size

- 5.1 x 2.6 x 0.9 in
- 13 x 6.6 x 2.3 cm

## Weight

- 3 oz
- 85 g

## Screen Size

- 2.6 in
- 6.6 cm

## Battery Capacity

- 20000 mAh

## Charging Time

- 110 minutes

## Storage

- 256 GB

## Playtimes by Media Type

- Audio: 25- 35 hours
- Video: 10- 20 hours
- eBook: 50- 60 hours

## Audio Formats

- MP3, WAV, FLAC, AIFF

## Video Formats

- MP4, AVI, MOV

## eBook Formats

- EPUB, PDF, MOBI

## Section 13

# Contact Us

### Email

Help@\*\*\*\*\*.com

### Website

www.\*\*\*\*\*.com

